


Exhaust System - ID4 2.2L Diesel - Diesel Particulate Filter (DPF)

Removal and Installation


Removal

1. For additional information, refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).

2.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.


Raise and support the vehicle.

3.

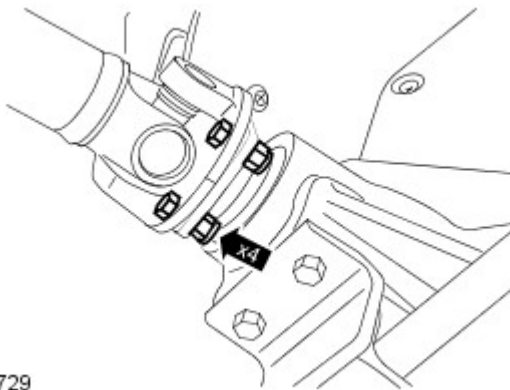


E90729

4.

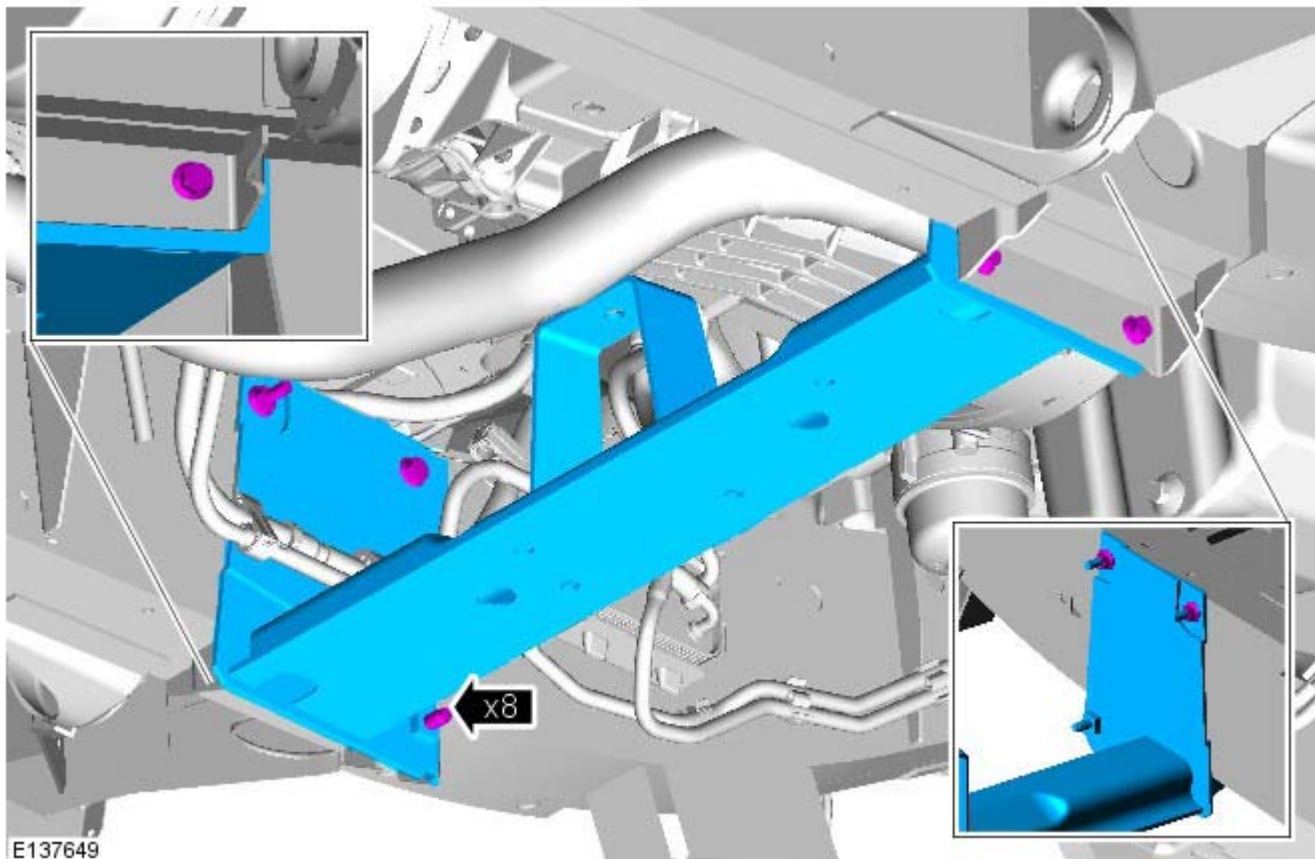


E137649


5.

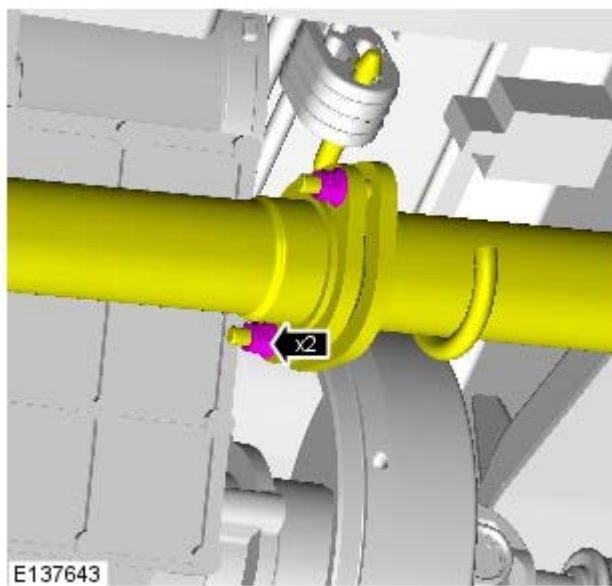


6.

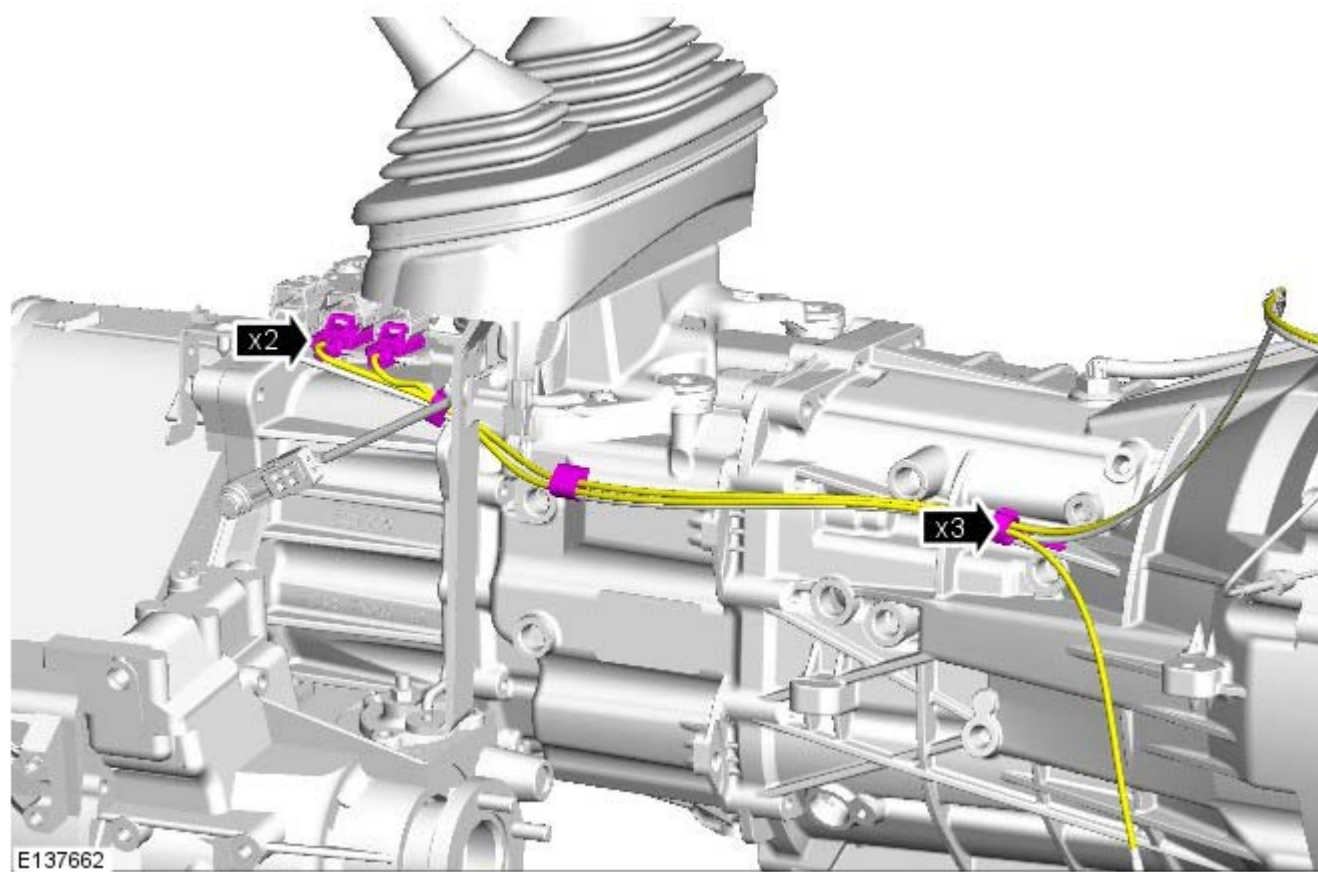

7.

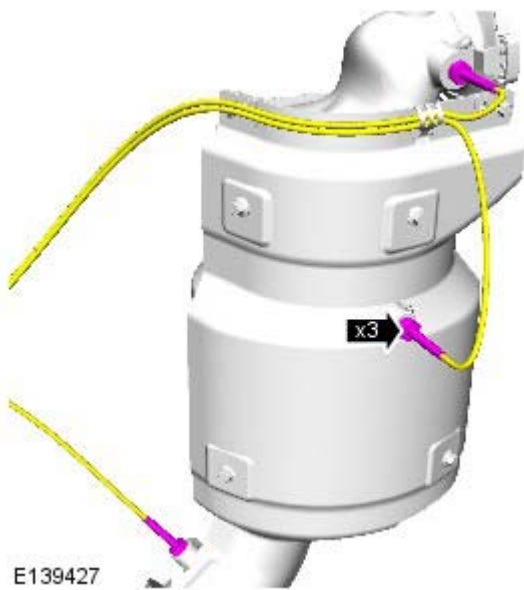


8.

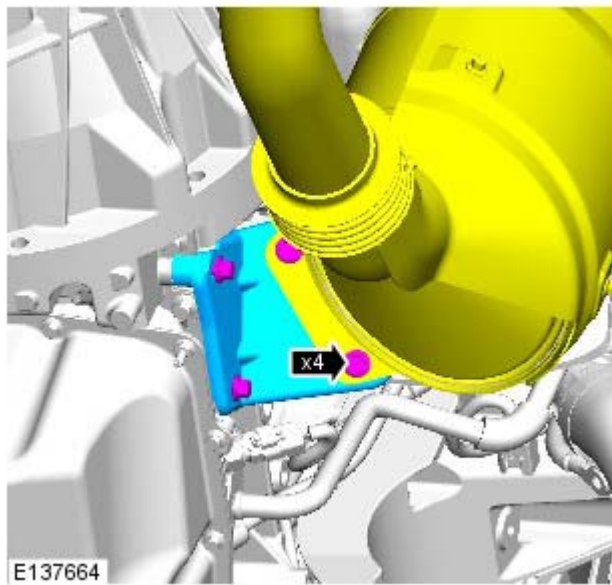


9. Lower the vehicle.


10. For additional information, refer to: Engine Cover (501-05 Interior Trim and Ornamentation, Removal and Installation).

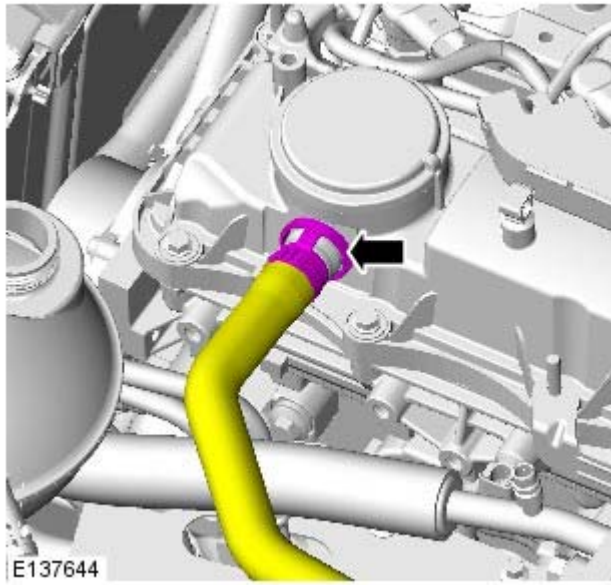

11.

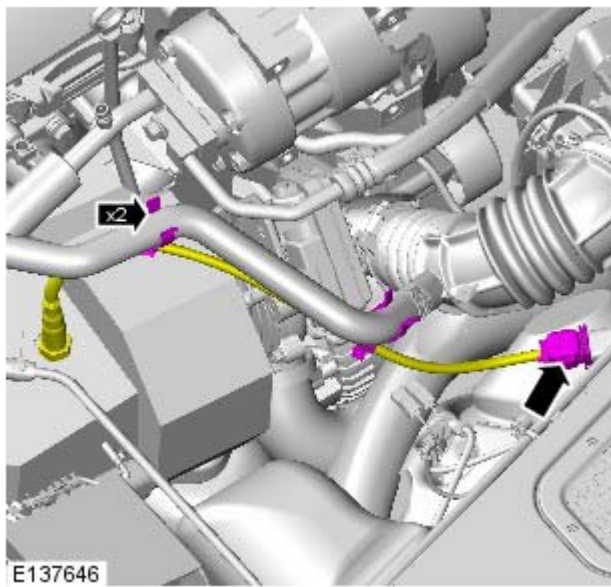


12.

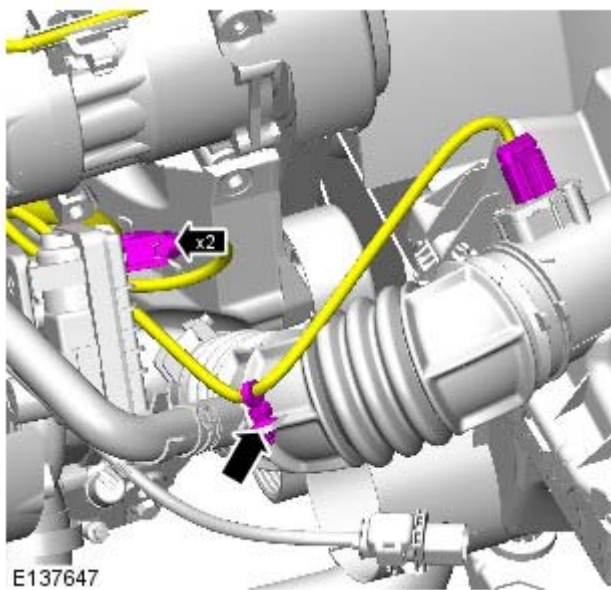



13.

14.

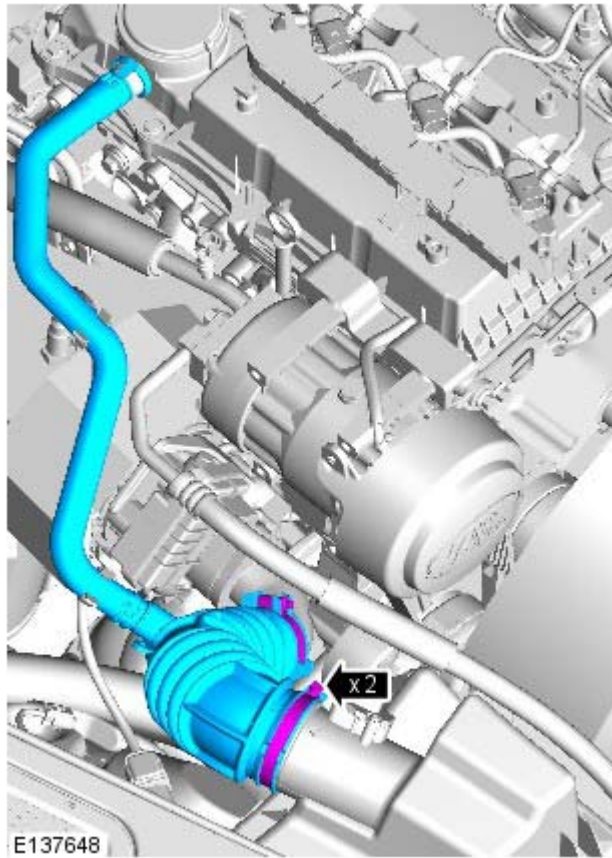


15.

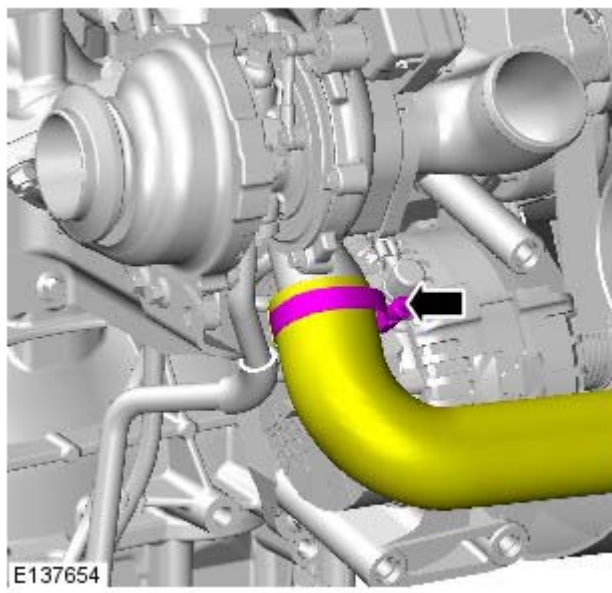


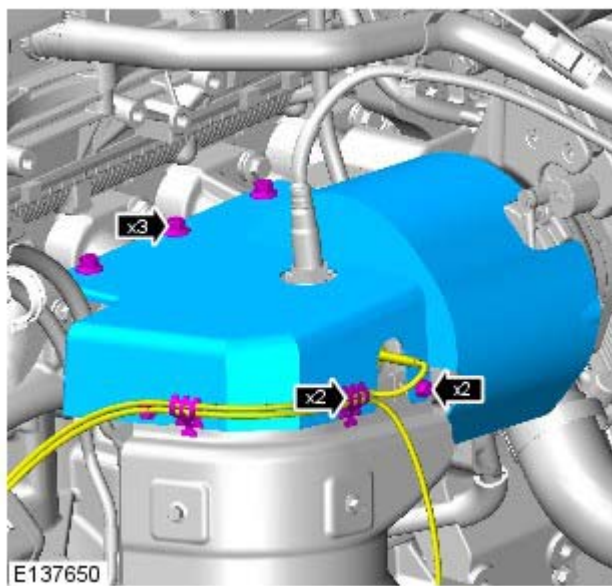

16.


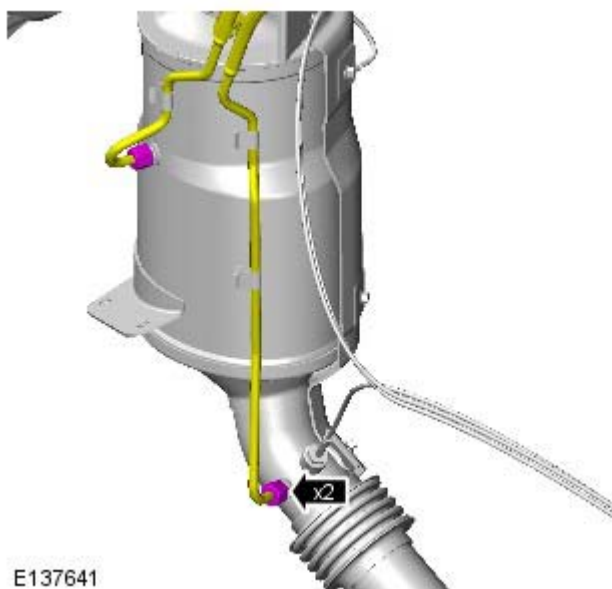


17.


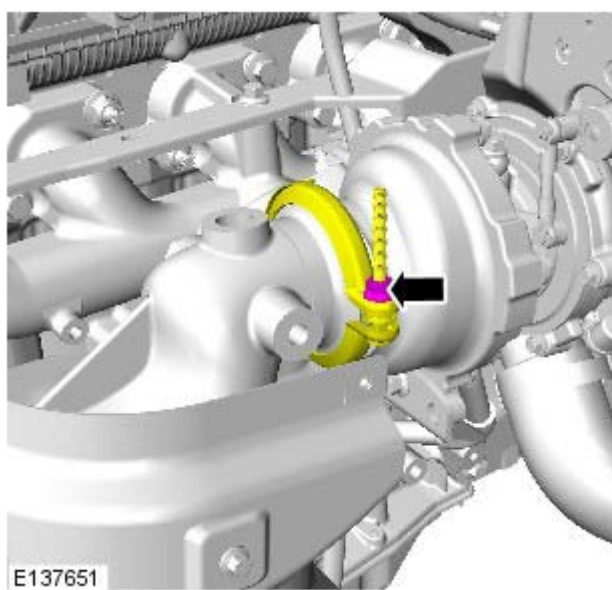



18.

19.

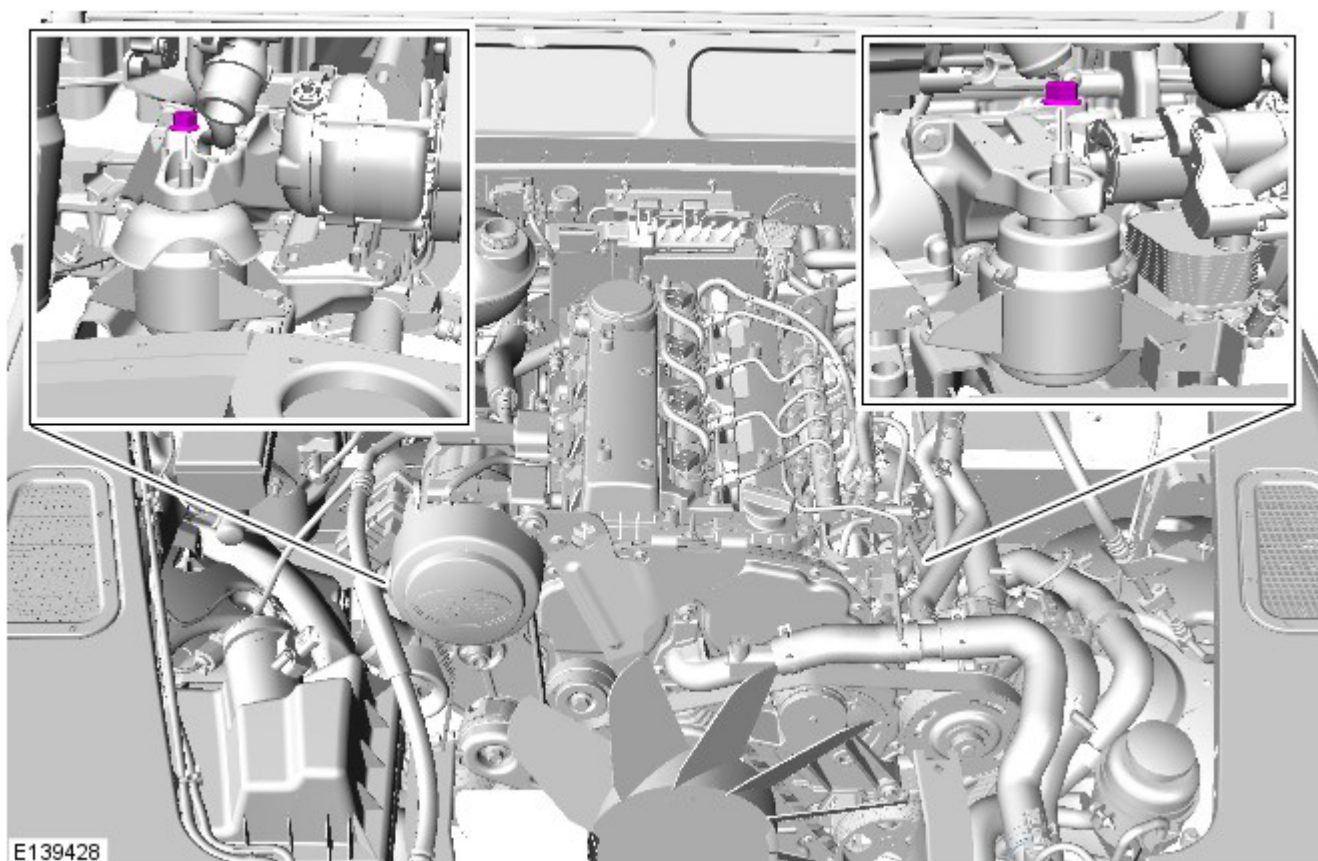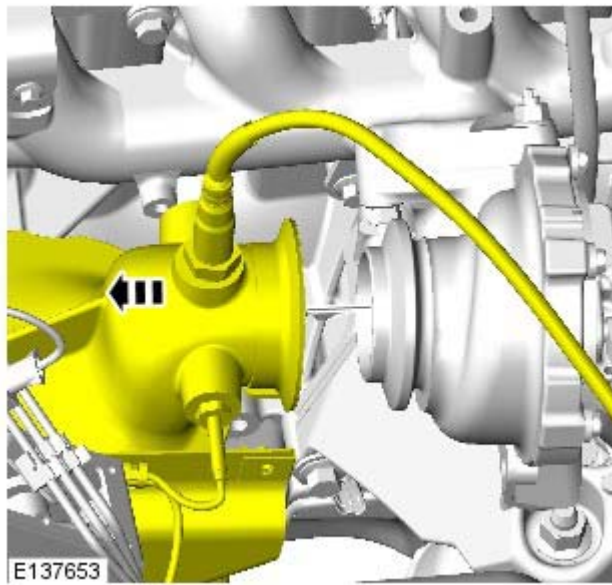


21.

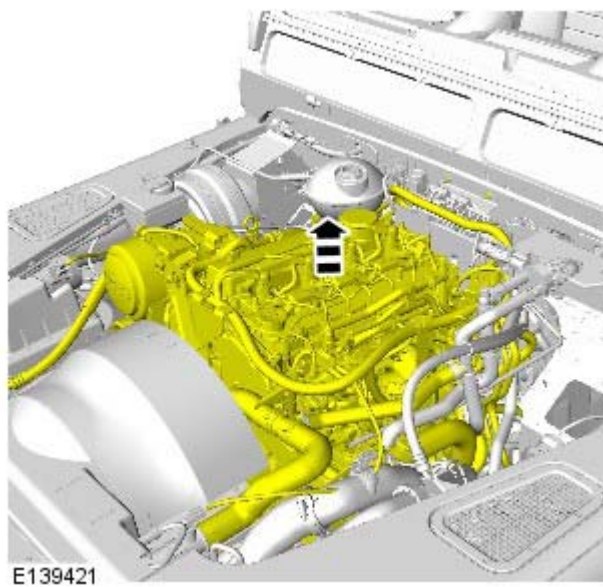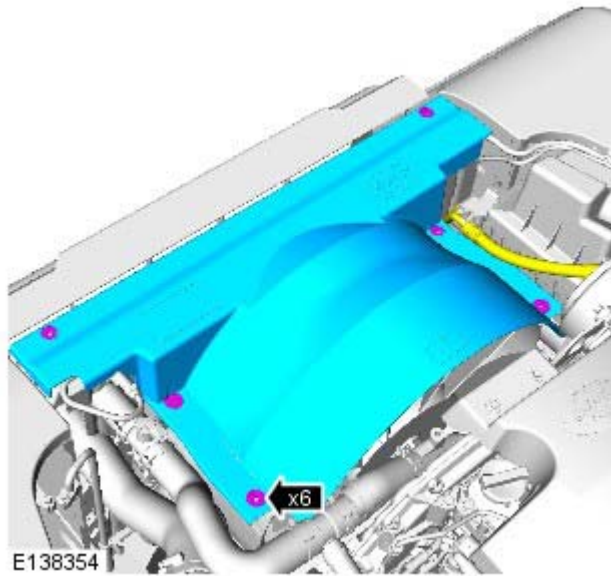


22.  CAUTION: CAUTION: Raise the engine assembly using suitable lifting equipment. Make sure the attached and surrounding components are not damaged during this step.

23.

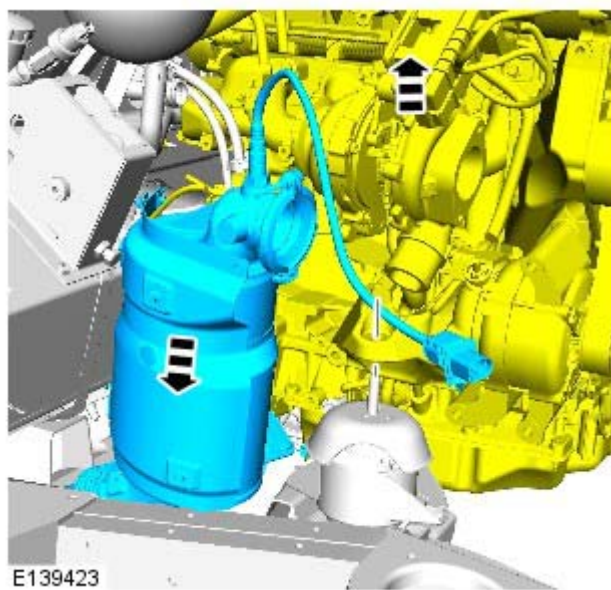



Installation

1.

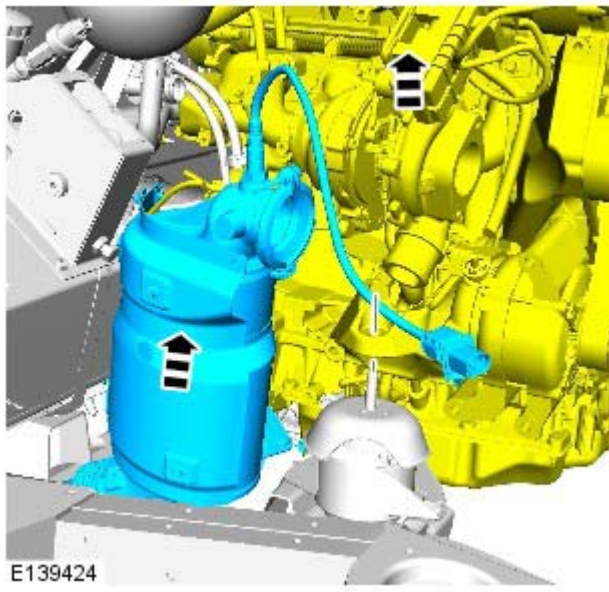


2.

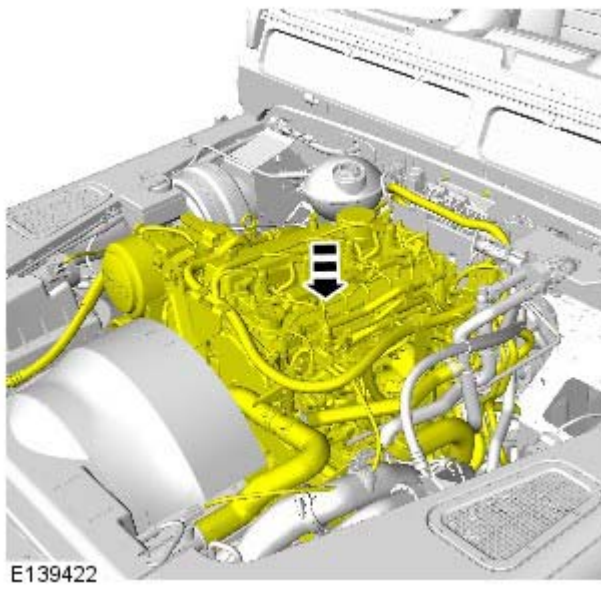


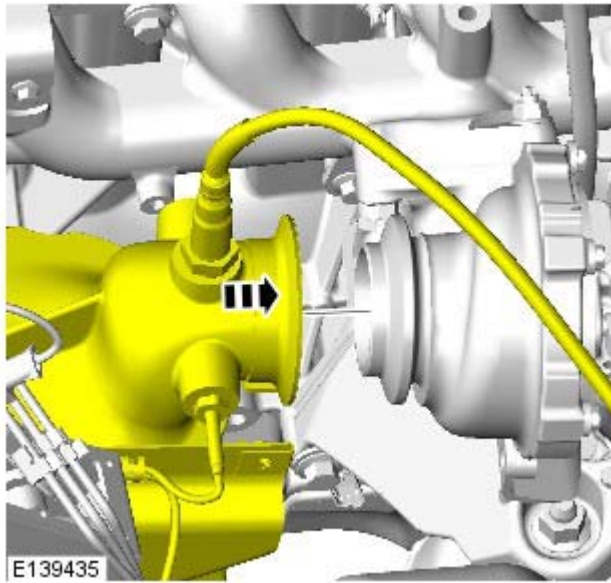


3.

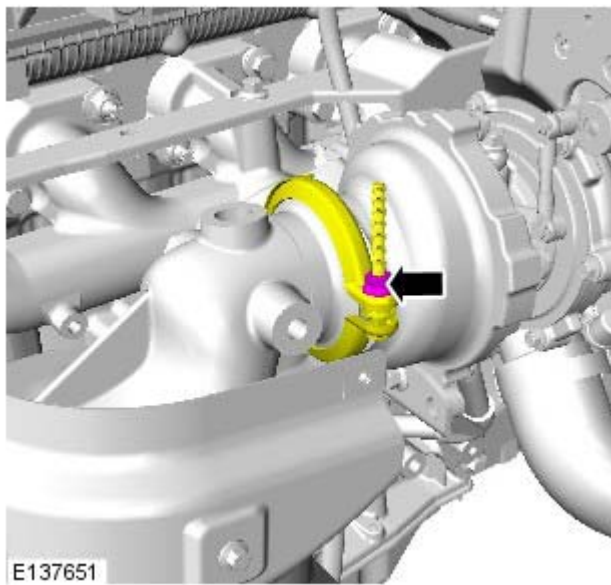


4. Torque: 10Nm

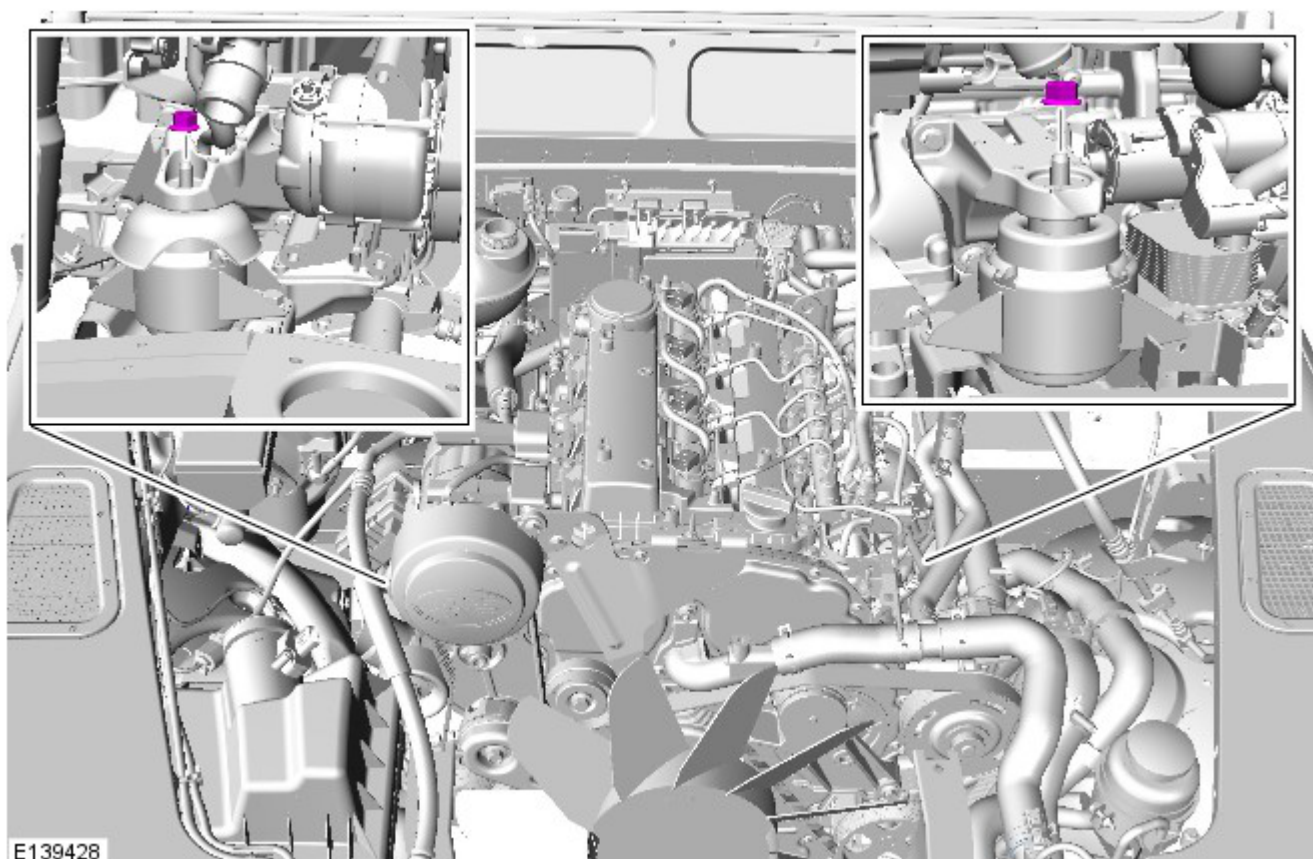


6. Torque: 25Nm

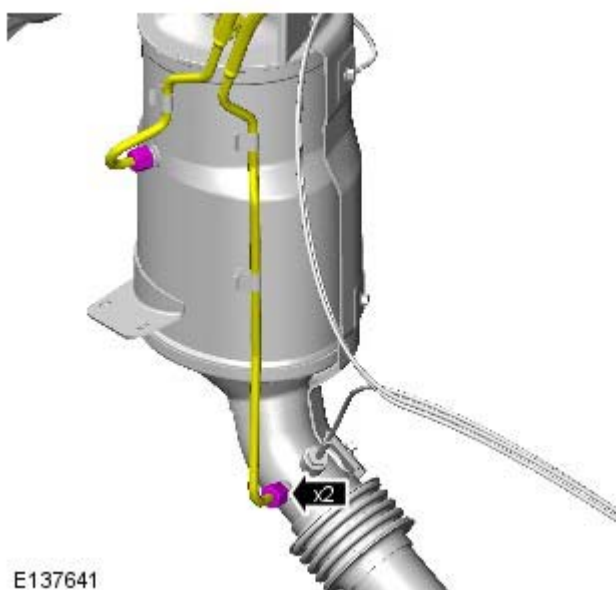


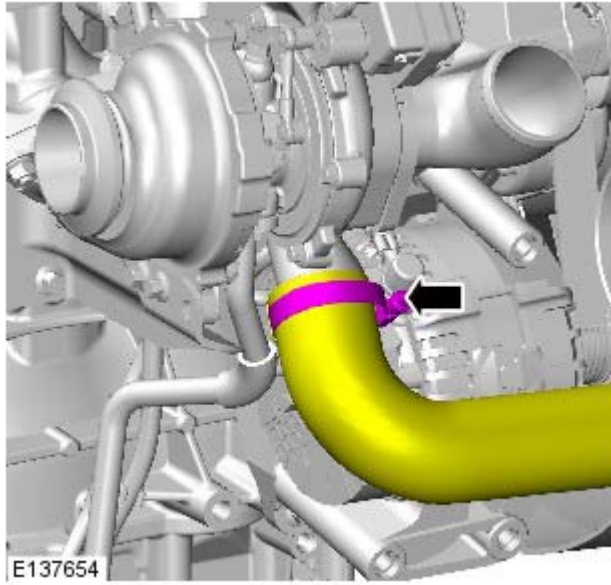


7. Torque: 3Nm

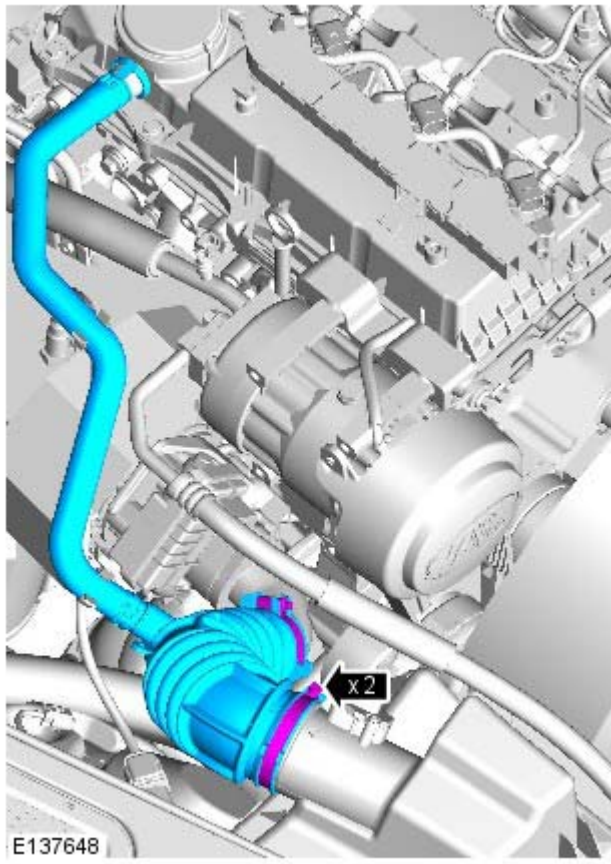


8. Torque: 3Nm

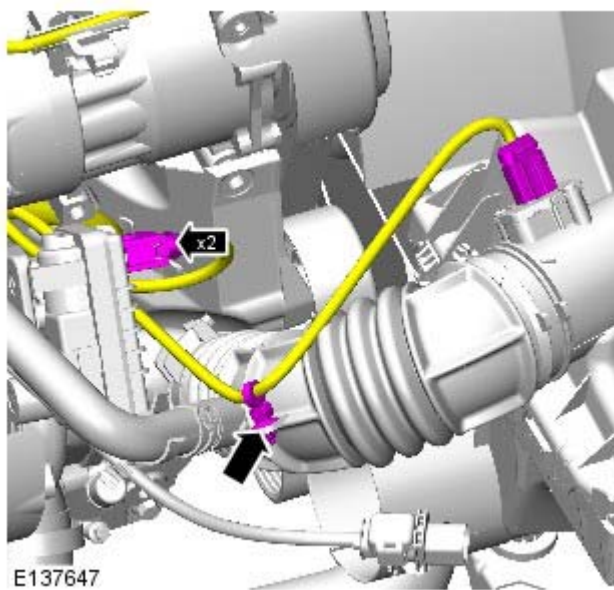

9.

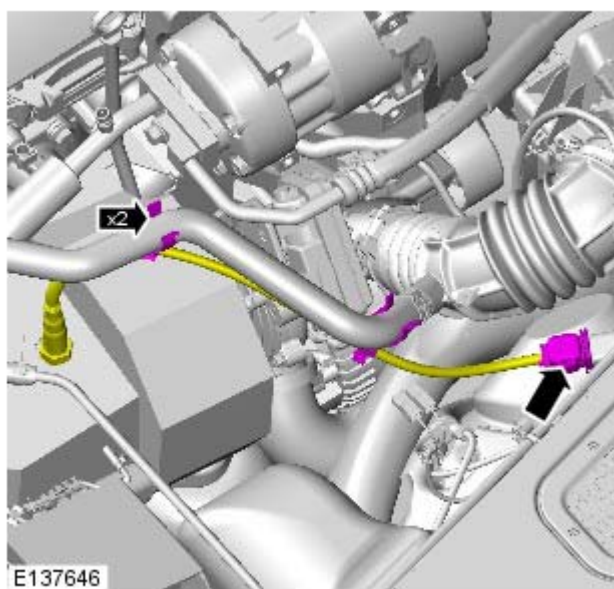


10.

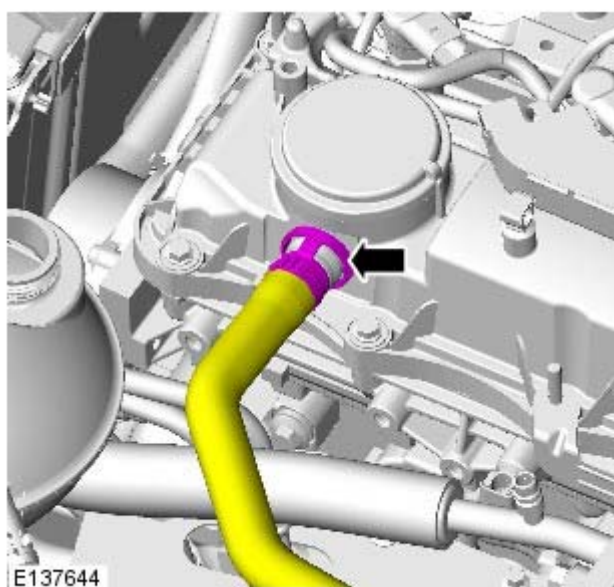

11.


12.

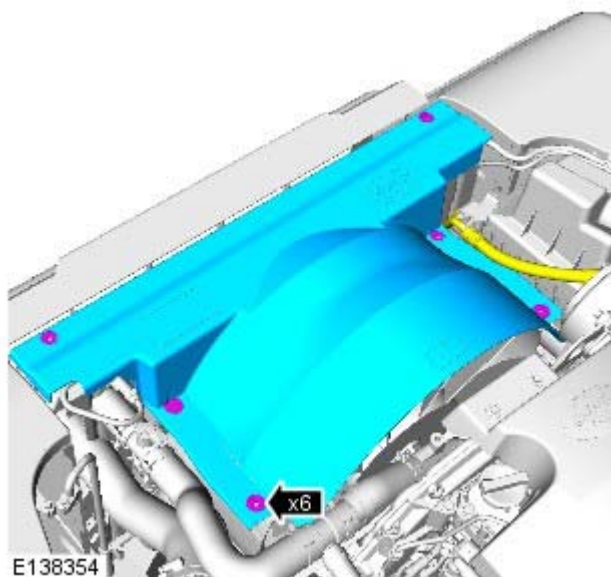

13. For additional information, refer to: Engine Cover (501-05 Interior Trim and Ornamentation, Removal and Installation).


14. Raise the vehicle on lift.

15. Torque: 25Nm

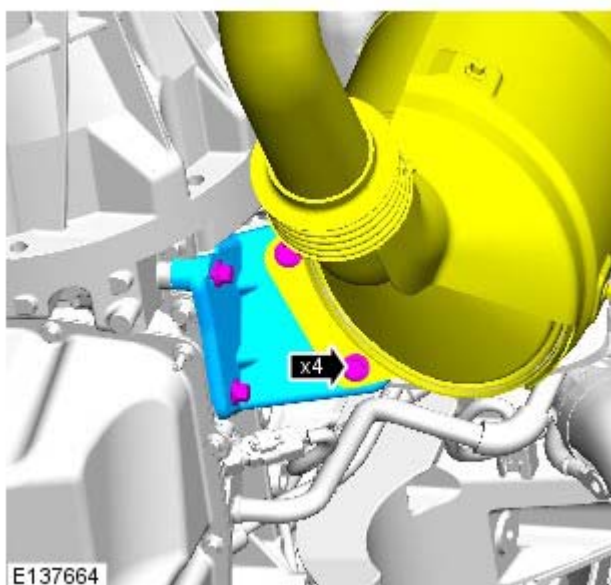



16. Torque: 25Nm

17.

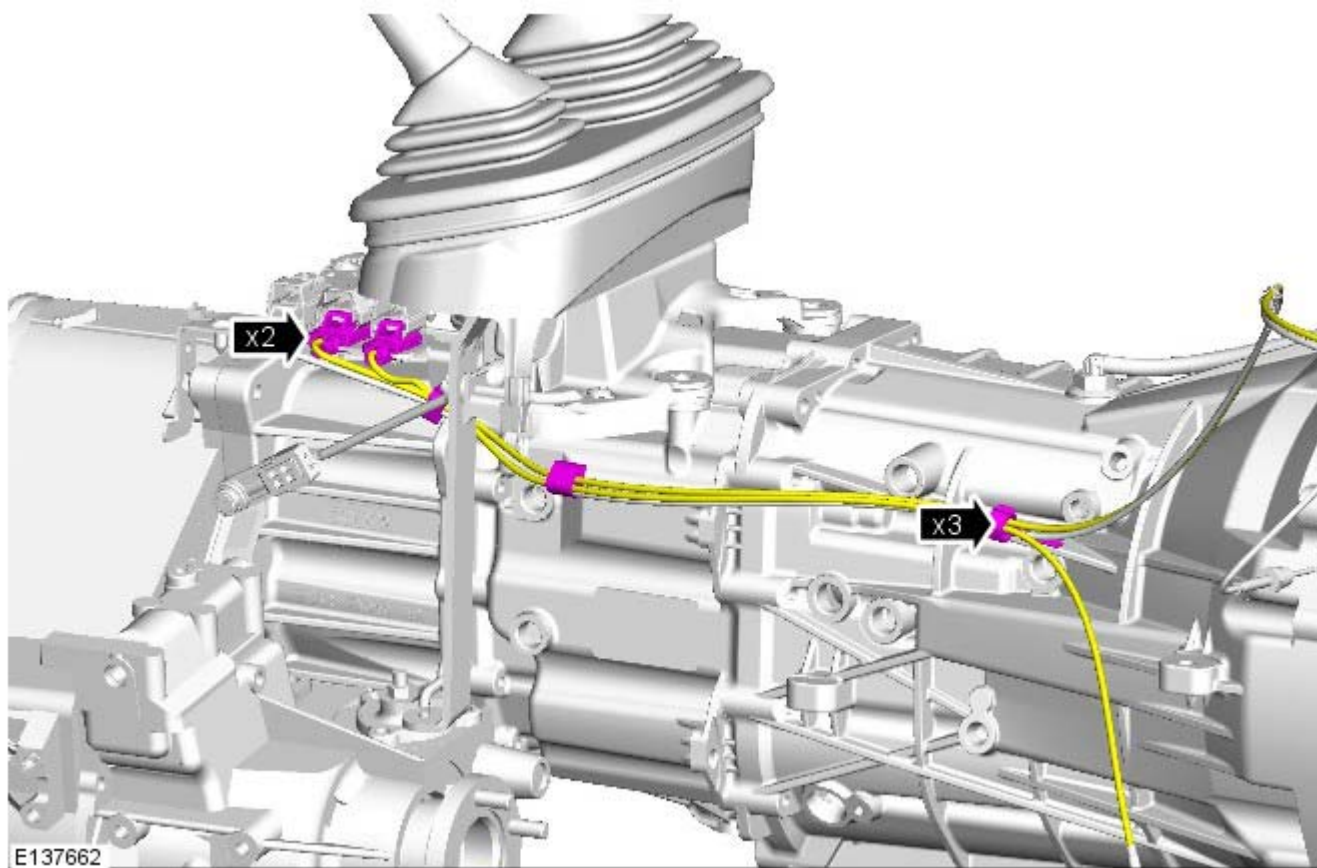


18. Torque: 80Nm

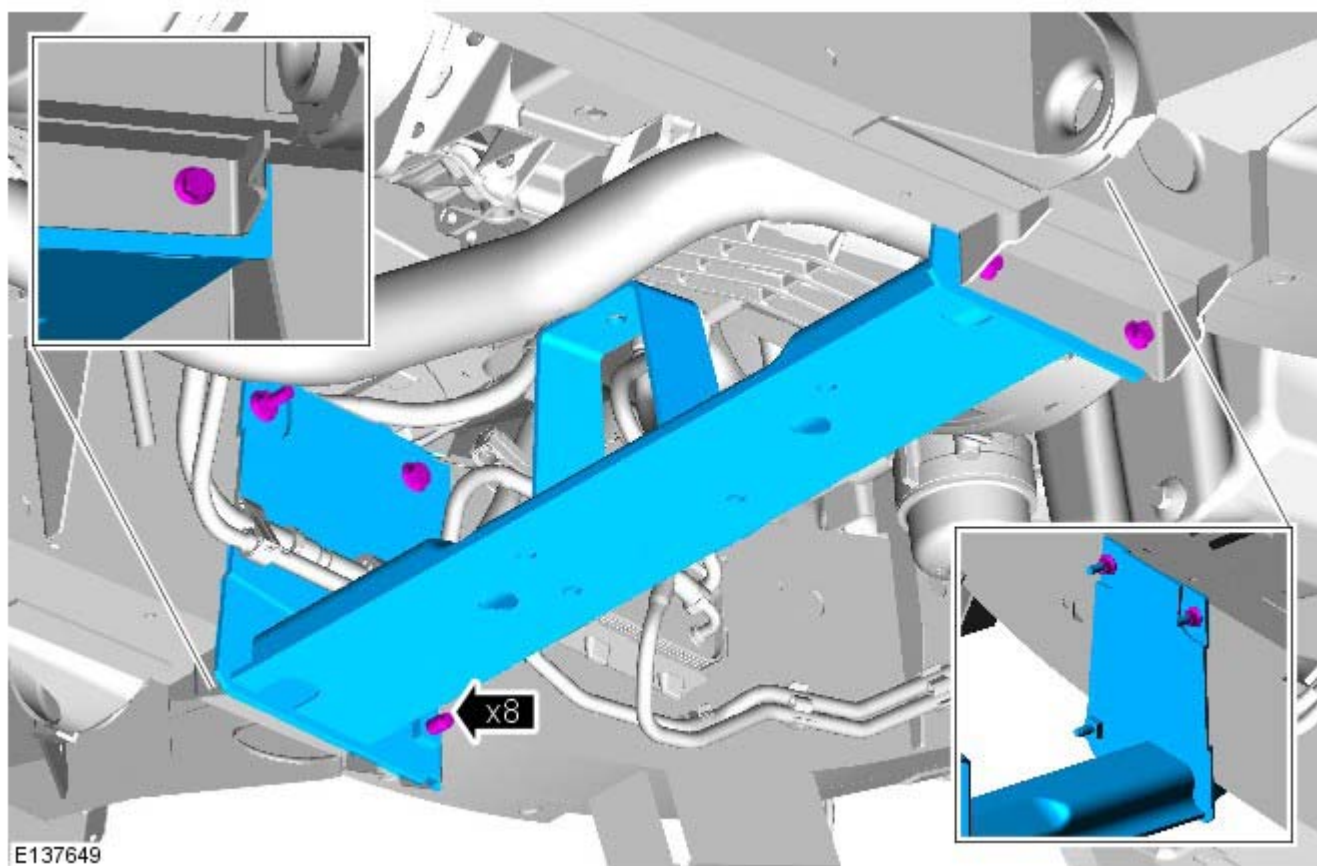

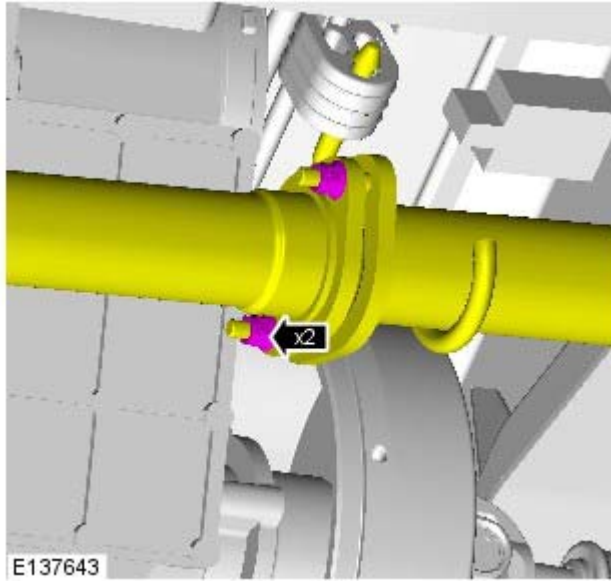

19. Torque: 25Nm

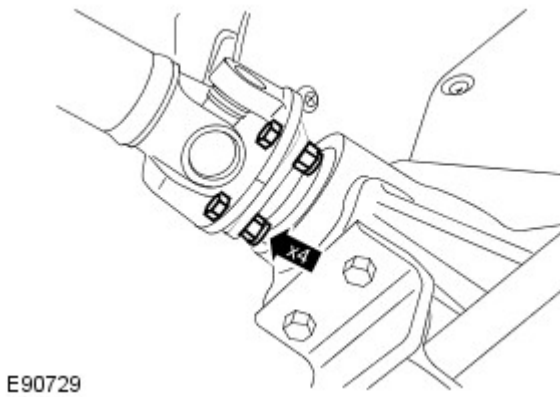

20. Torque: 47Nm

21. For additional information, refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
22. If a new unit is installed, configure using the approved diagnostic tool.